



ASSEMBLY INSTRUCTION
– JUST FOLLOW ME





HIGH LINEAR SLIDING DOOR

KIT 36906460



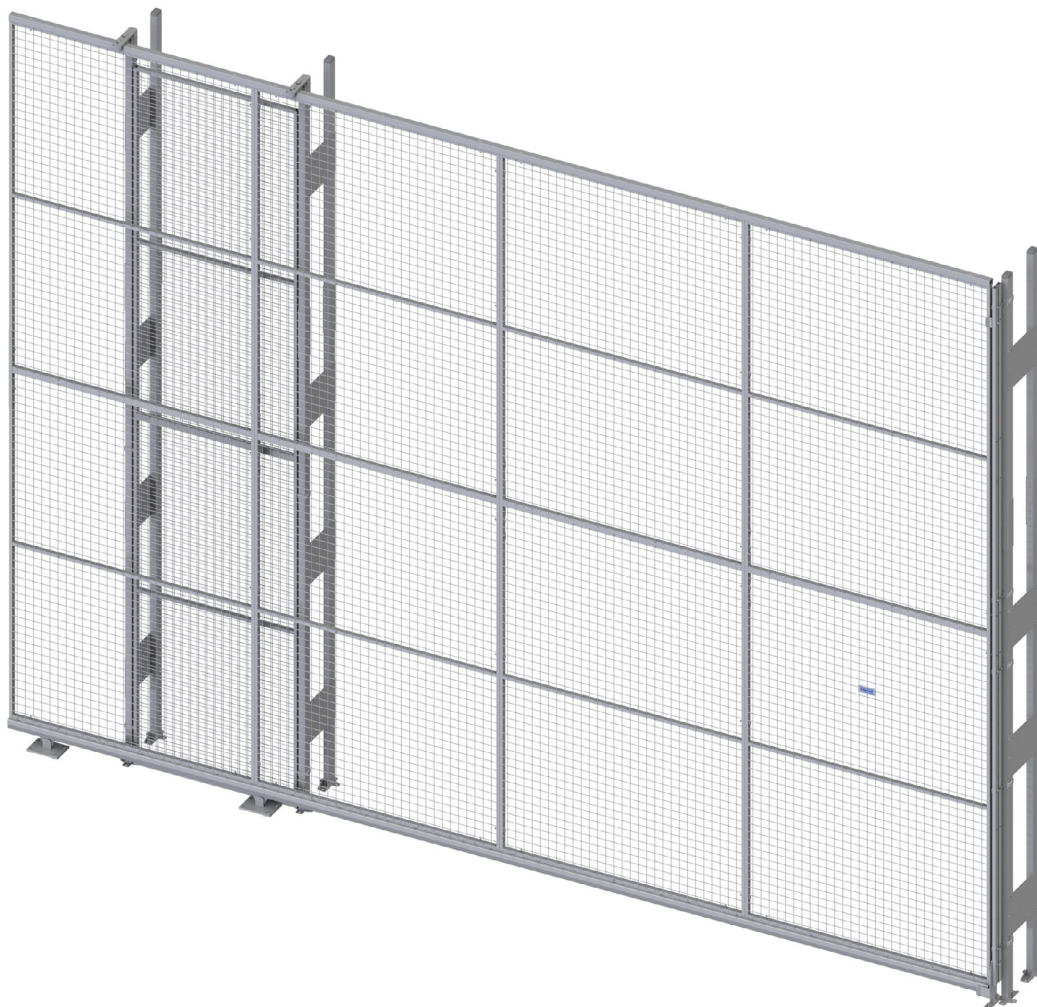


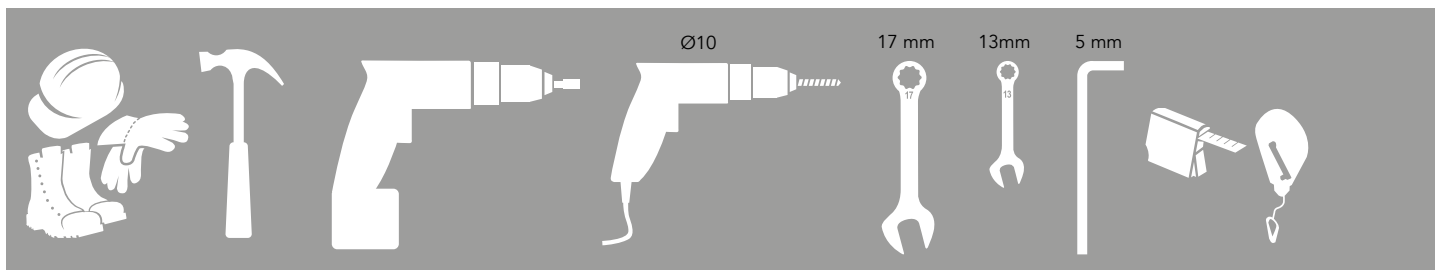


High linear sliding door

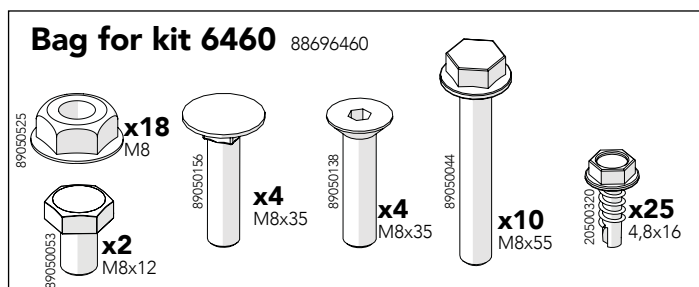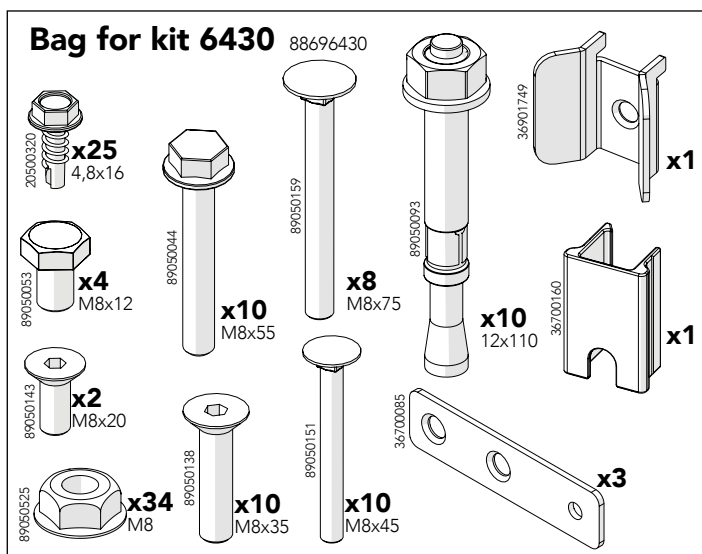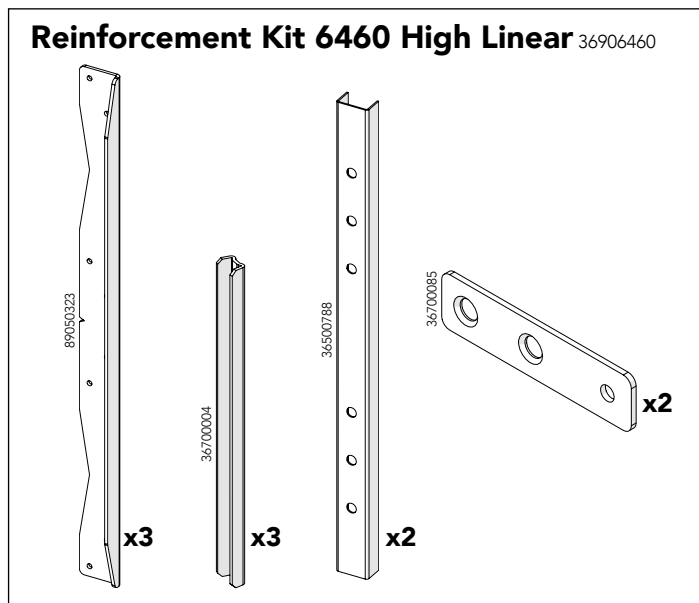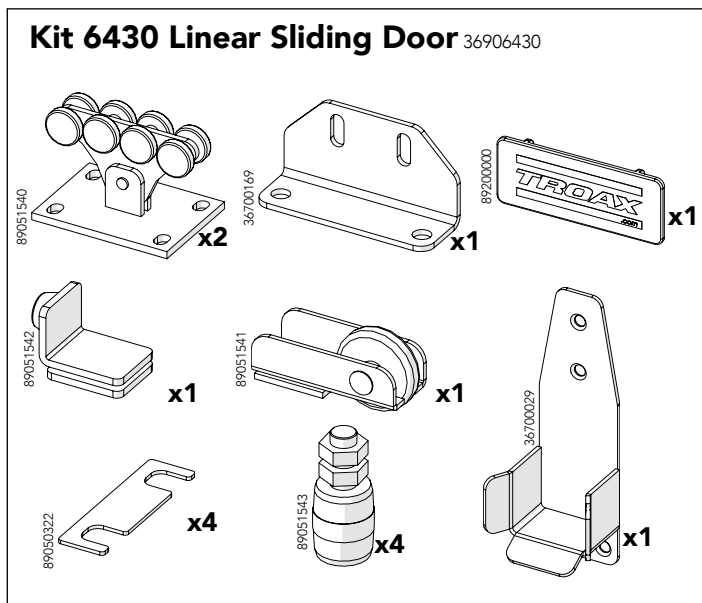

Bracket double post

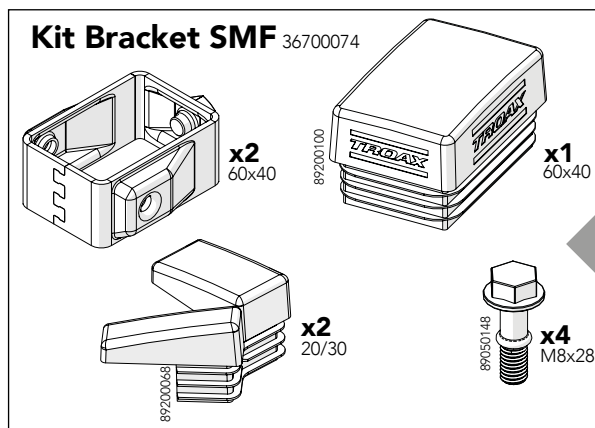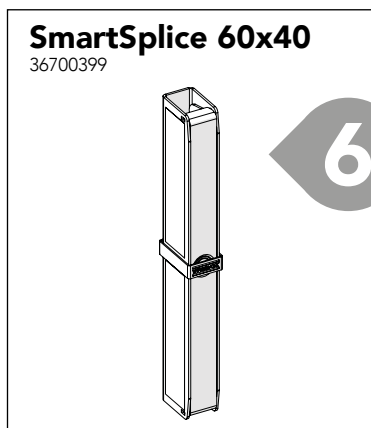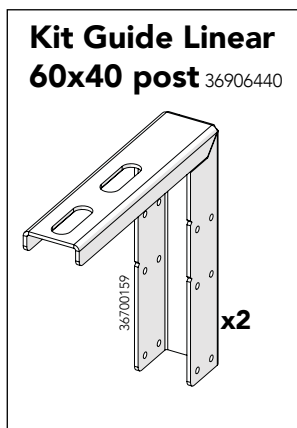



Kit Bracket SmF

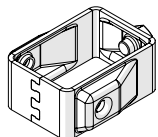

13



1

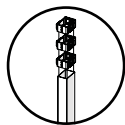

Kit Bracket SmF




M8x28

13



2

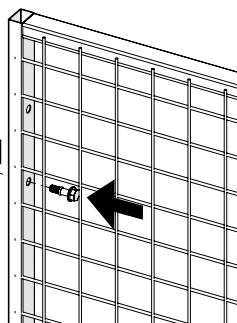

Kit Bracket SmF




M8x28


13



4

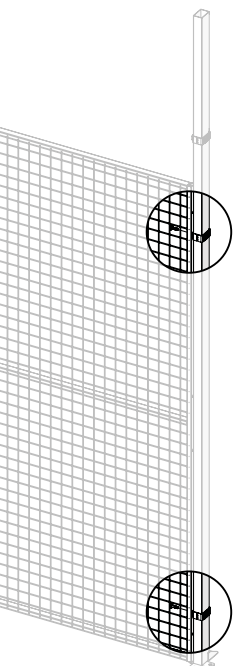



Kit Bracket SmF






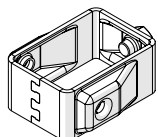


13






3

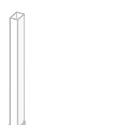

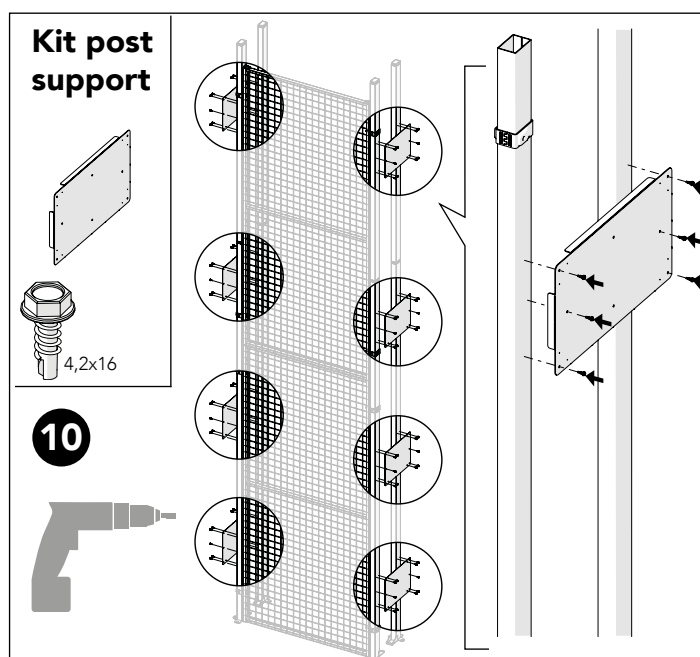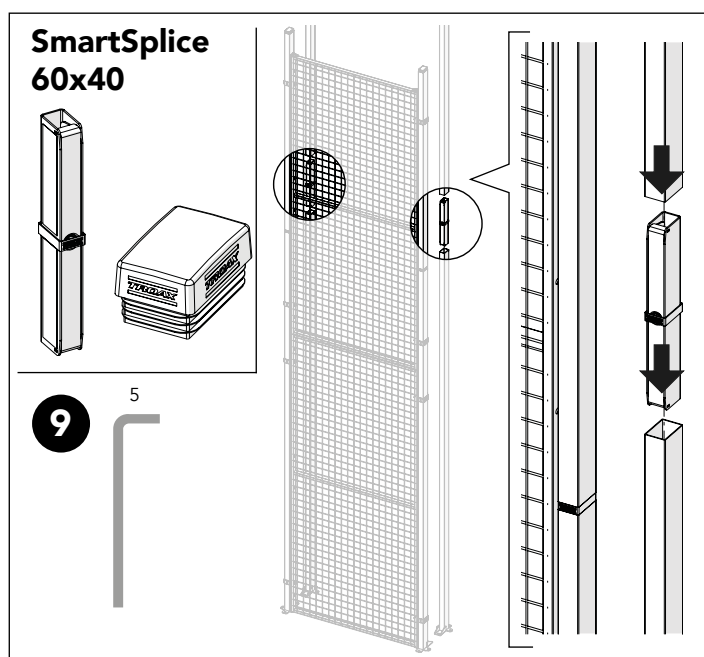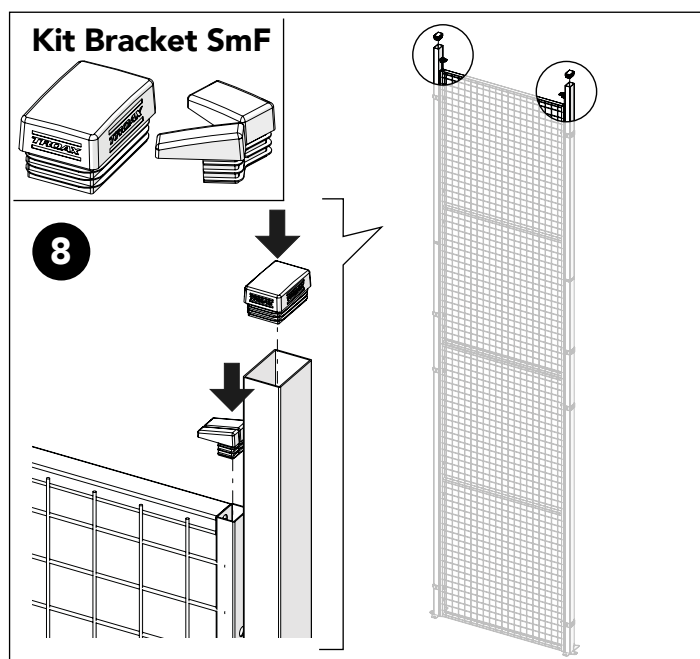
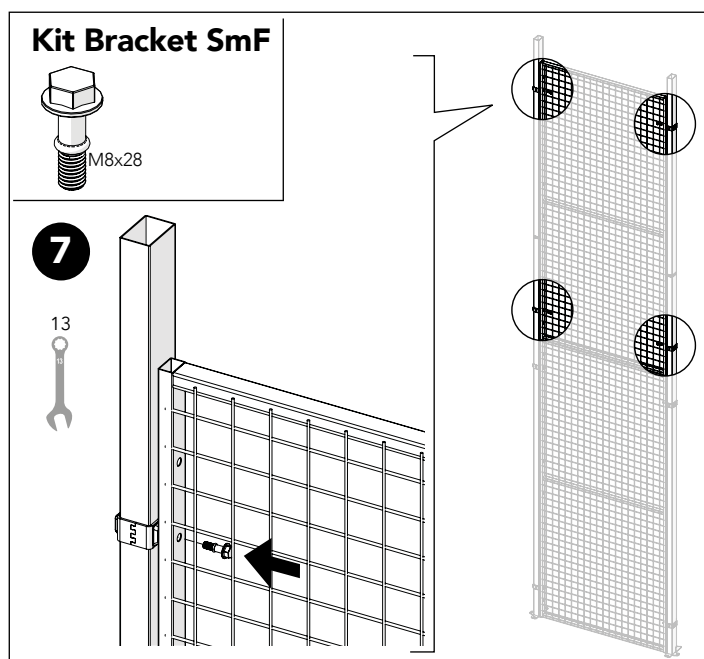
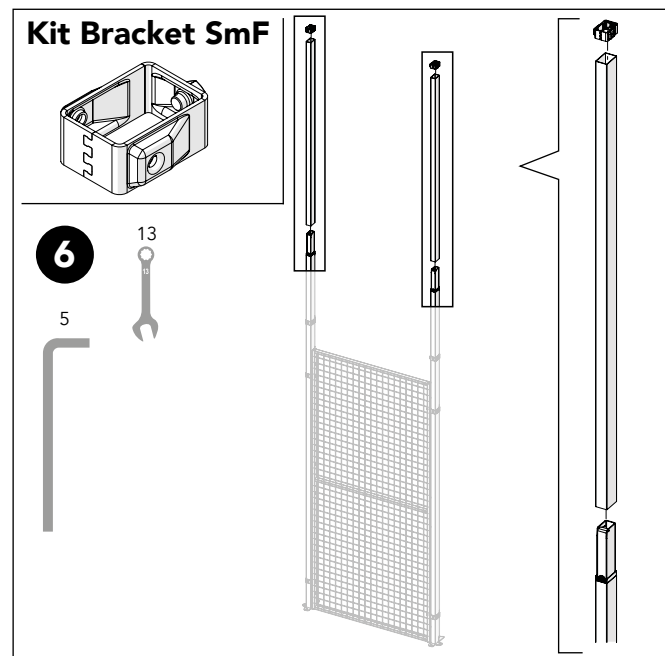
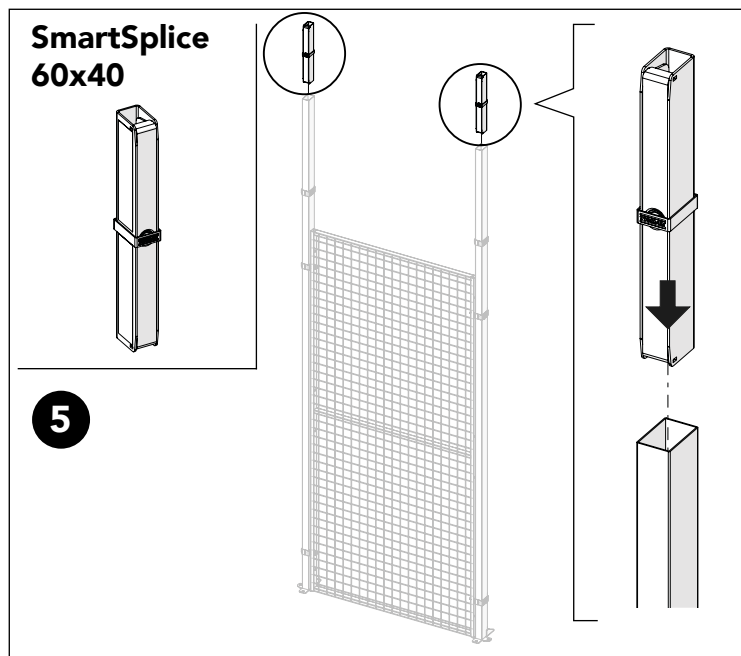


Kit 6430 Linear Sliding Door + Bag for kit 6430 + Kit Bracket SMF + Kit Extension bracket 60x40 + Bracket double post

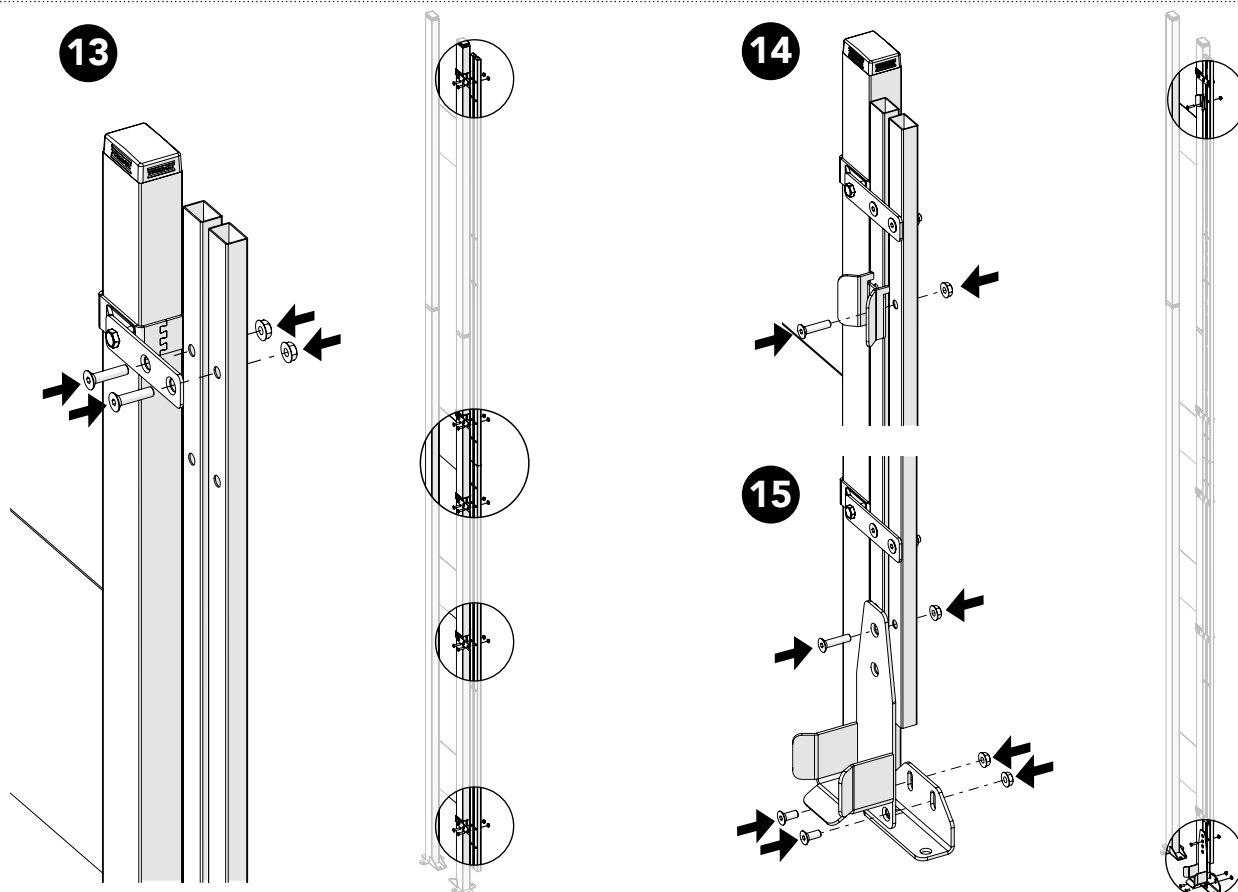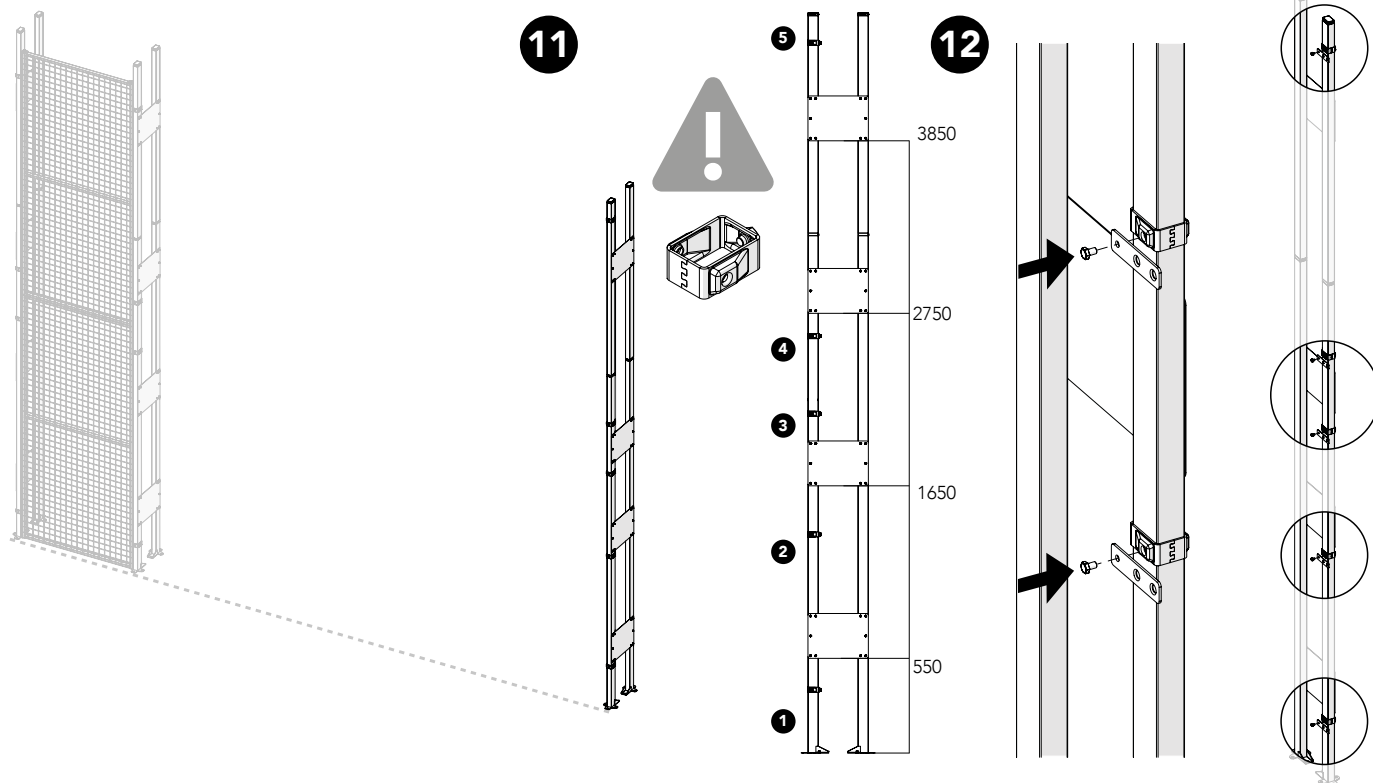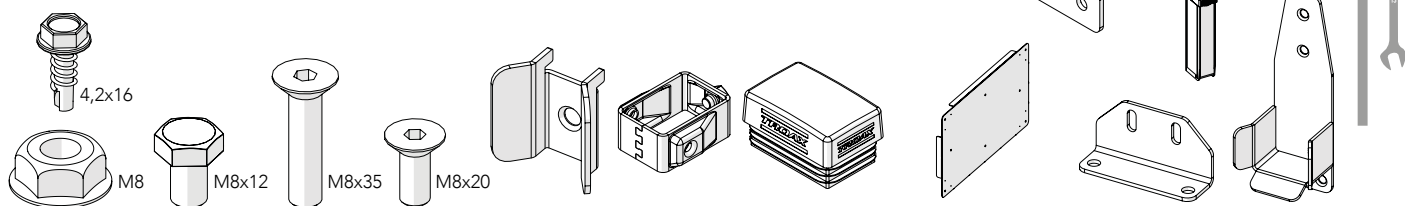


Bag for kit 6430

16

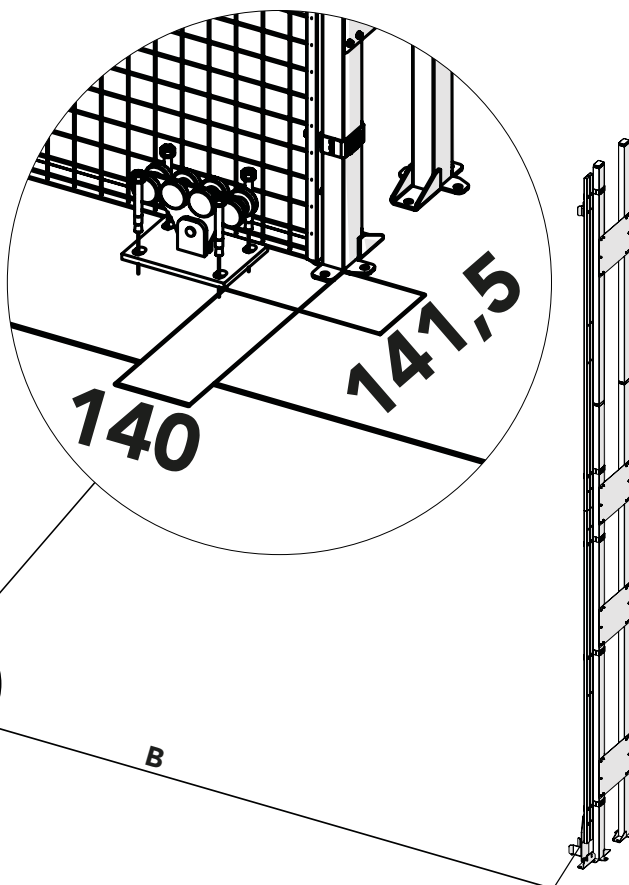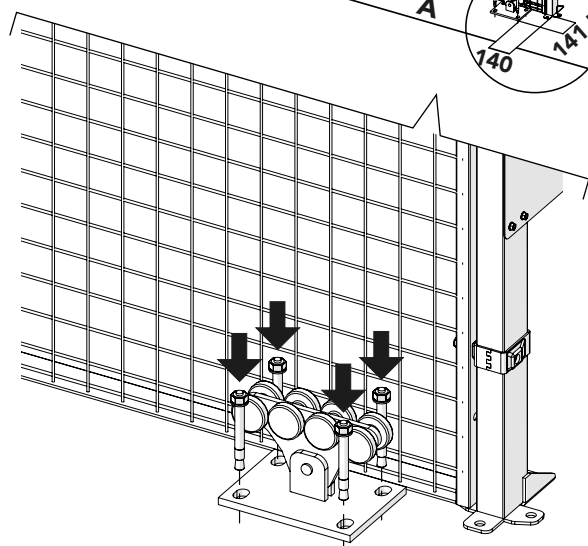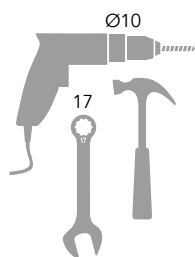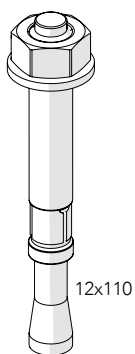


A	B
730	1800
1015	2500
1015	3000
1015	3500
1255	4250

Art no: 88754757 ver. 005



$$A + B + C + D = \text{[Diagram of mesh panel]} + \text{[Diagram of mesh panel]} + \text{[Diagram of mesh panel]} + \text{[Diagram of mesh panel]}$$


		A	B	C	D
1800	3000 mm	1500	1500		
2500	4000 mm	1500	1500	1000	
3000	4500 mm	1500	1500	1500	
3500	5000 mm	1000	1500	1500	1000
4250	6000 mm	1500	1500	1500	1500

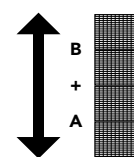


$$= \text{[Diagram of mesh panel]} + \text{[Diagram of mesh panel]}$$

	A	B
3000 mm	2200	800
4400 mm	2200	2200

Reinforcement Kit 6460 High Linear + Bag for kit 6460

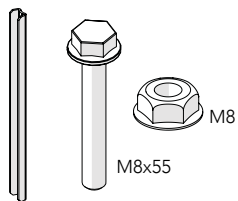



17

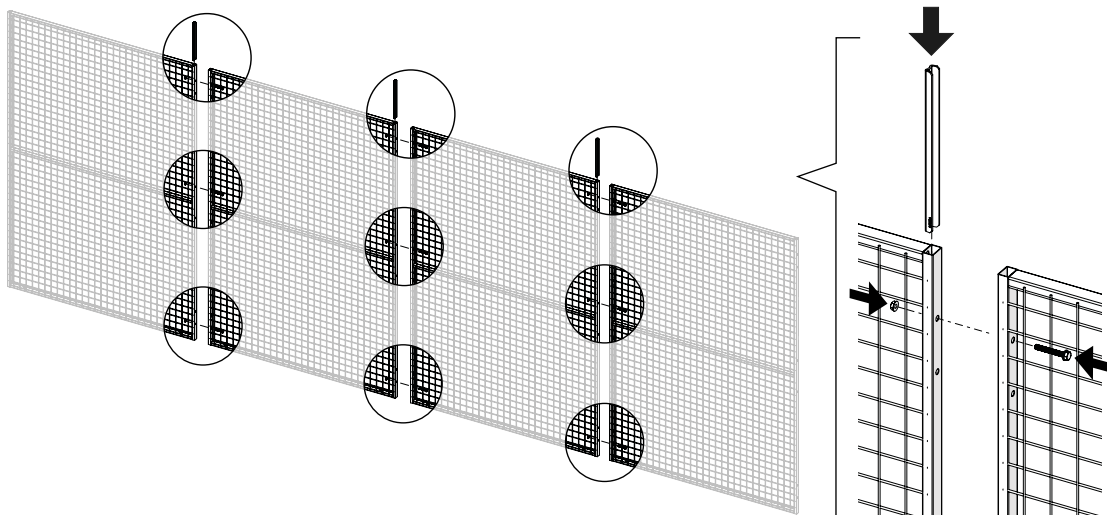


Bag for kit 6430




18

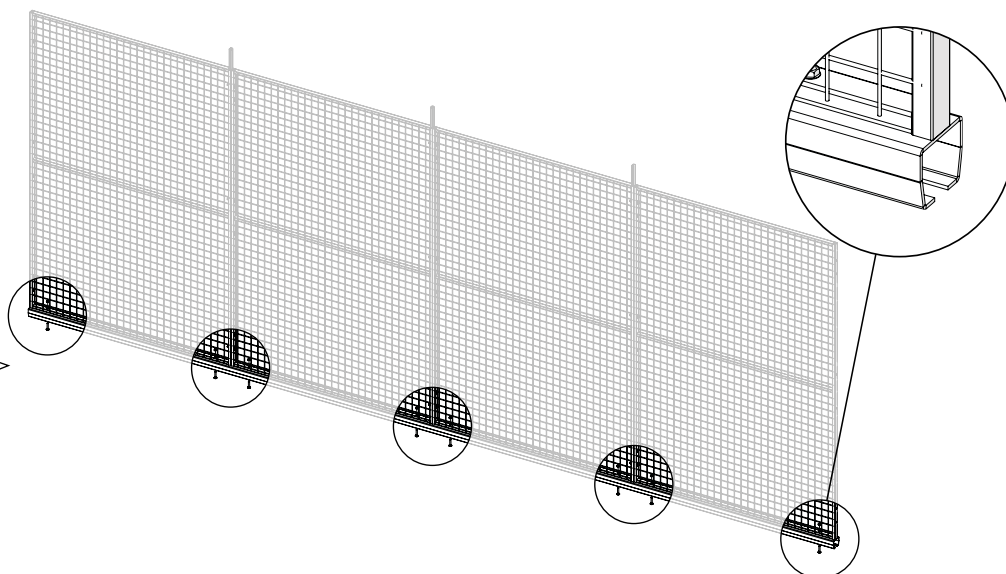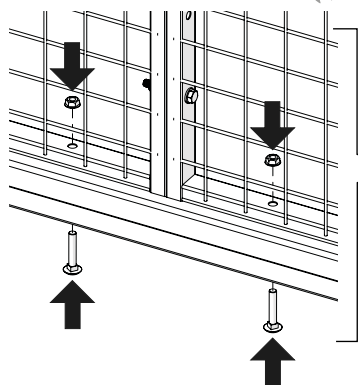



19

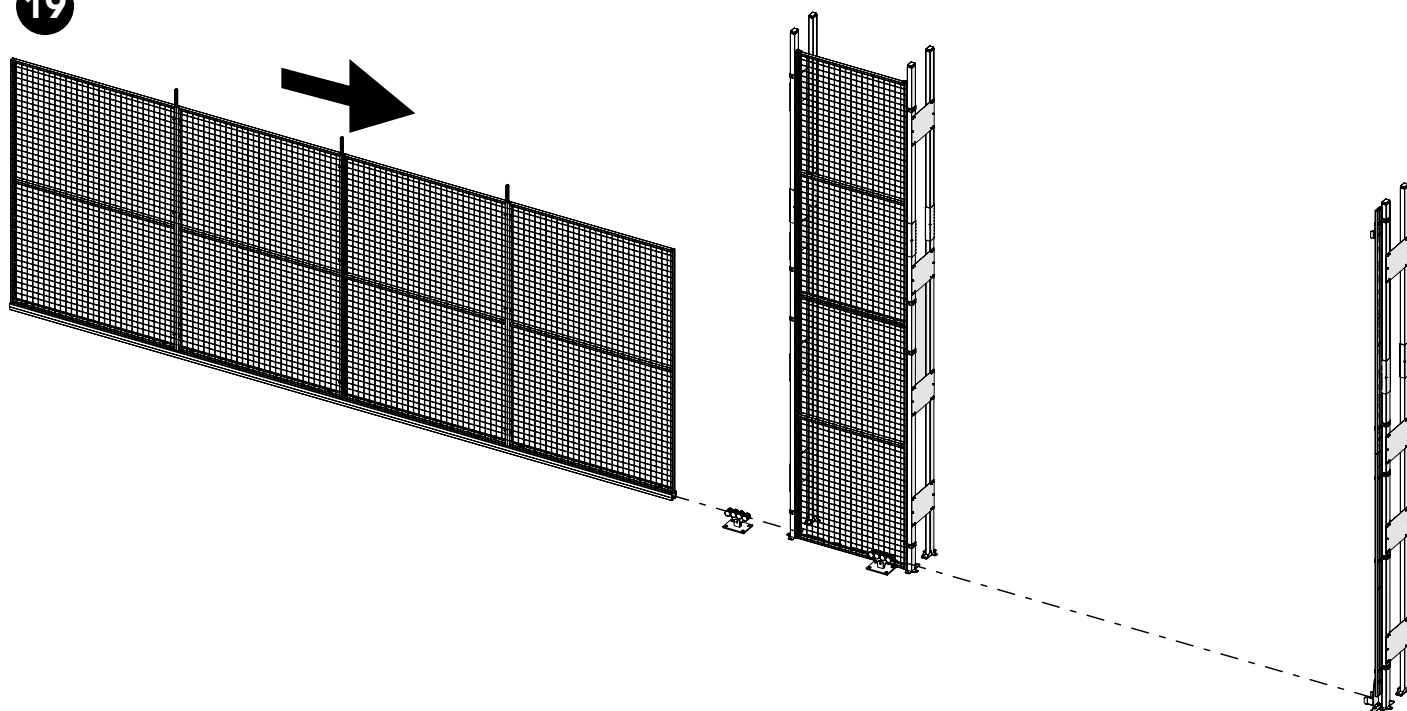


**Reinforcement Kit
6460 High Linear
+ Bag for kit 6460**

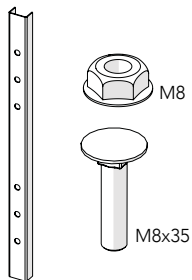



20

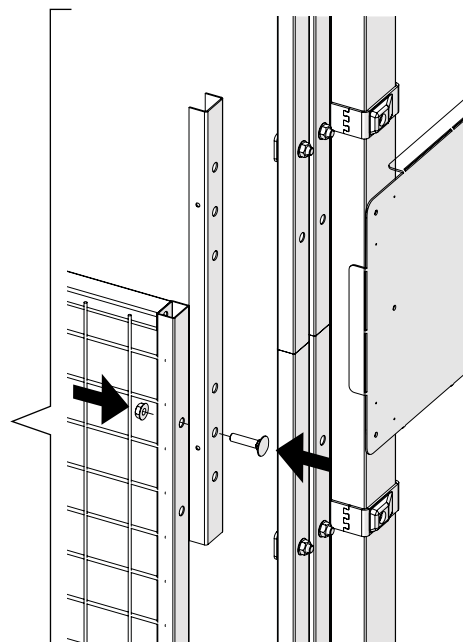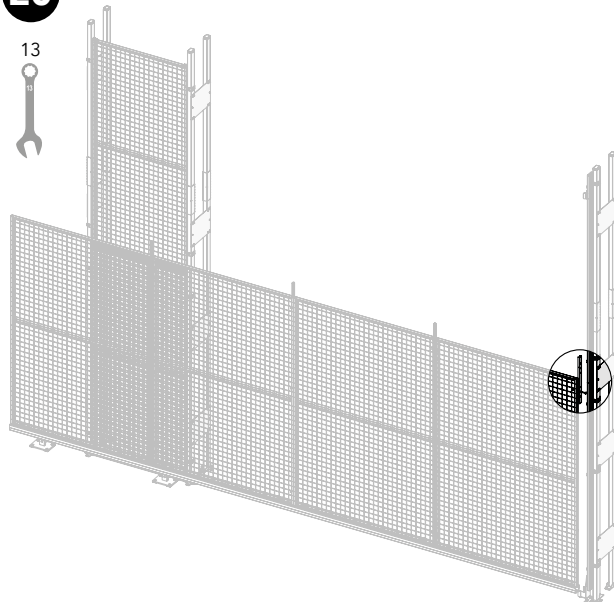


Bag for kit 6460

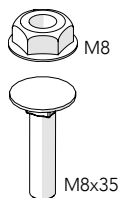



21

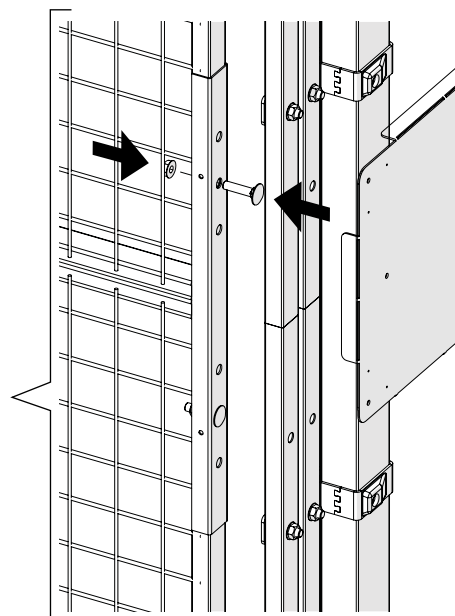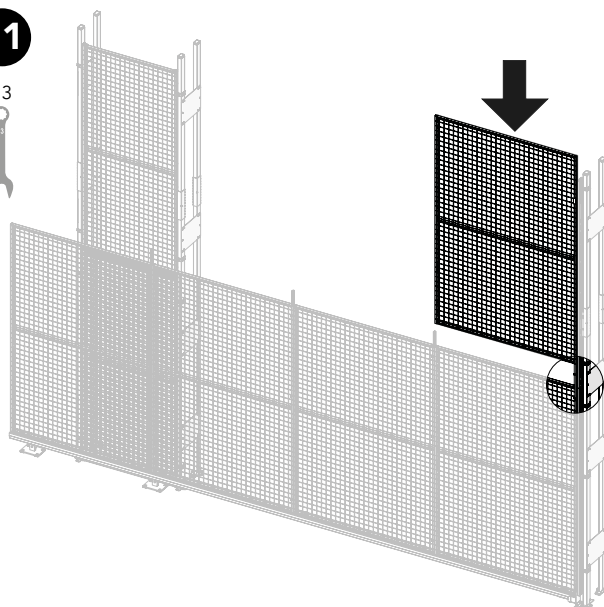

Bag for kit 6460

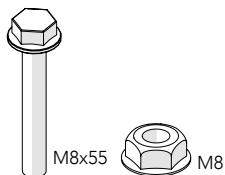


22

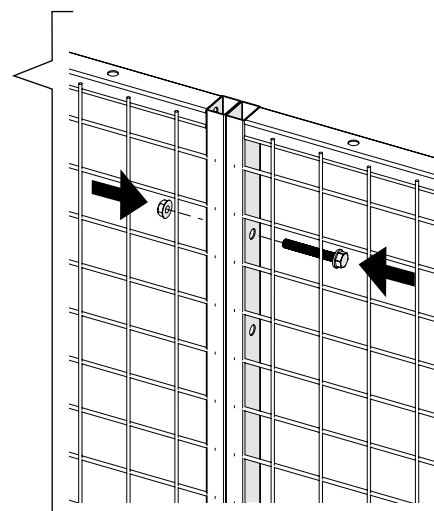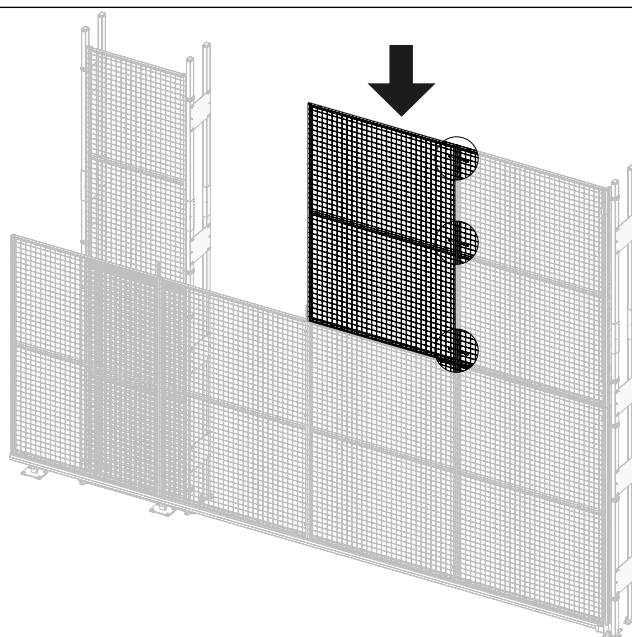



Art no: 88754757 ver. 005

Bag for kit 6460

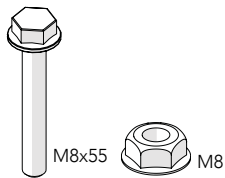


23

13

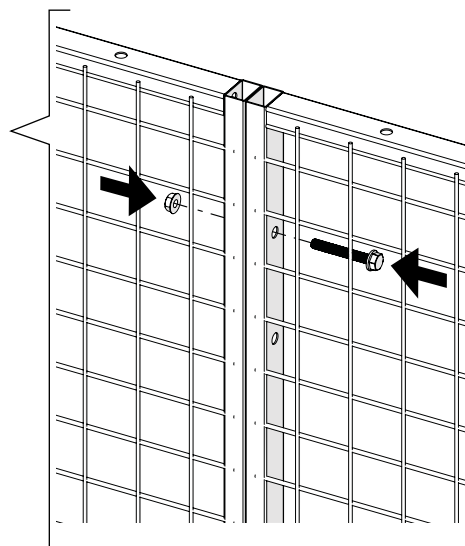
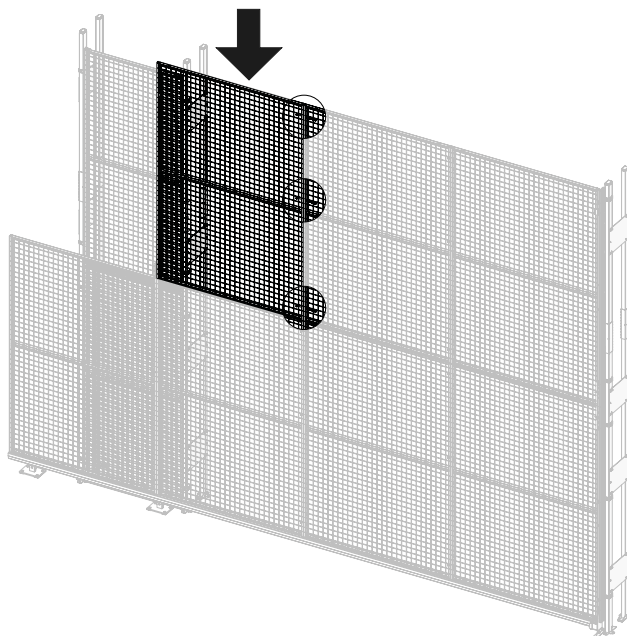


Kit 6460 + Bag for kit 6460

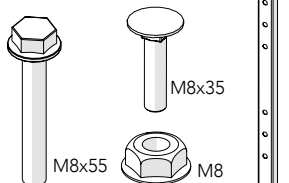


24

13

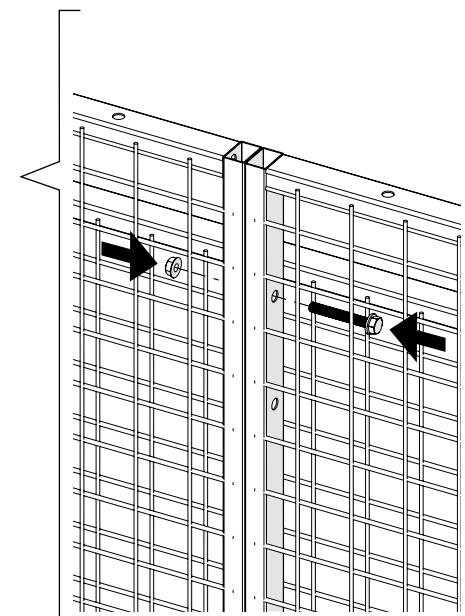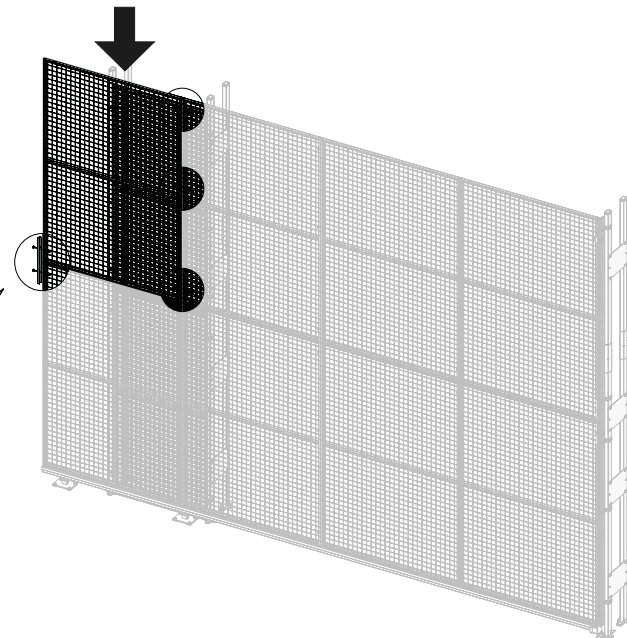


Bag for kit 6430

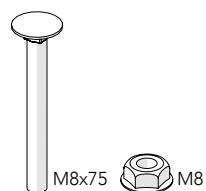


25

13

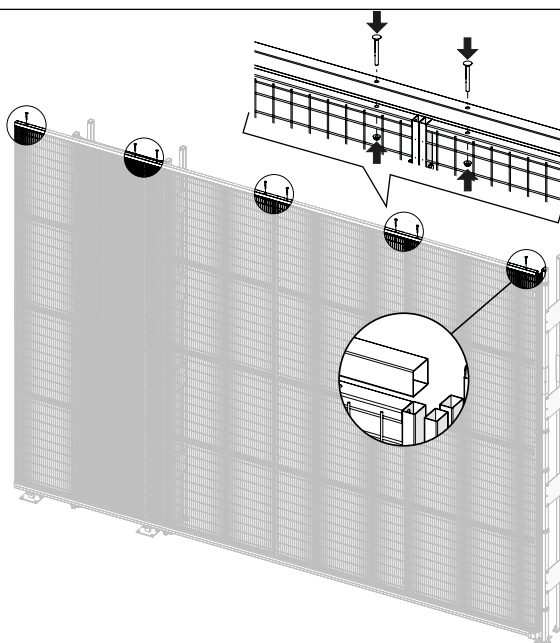


Kit 6430 Linear Sliding Door + Kit Guide Linear 60x40 post


26

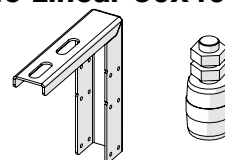


x2

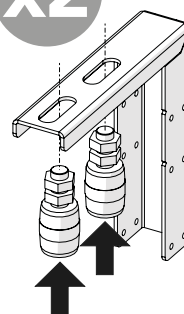



x2

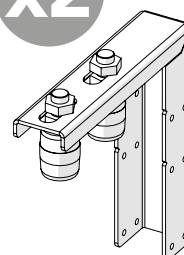


**Bag for kit 6430
+ Kit Guide
Linear 60x40
post**

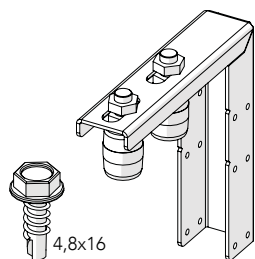

27

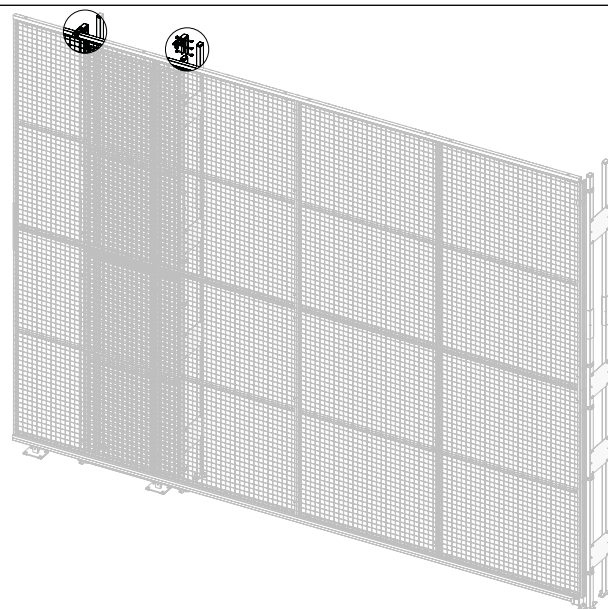
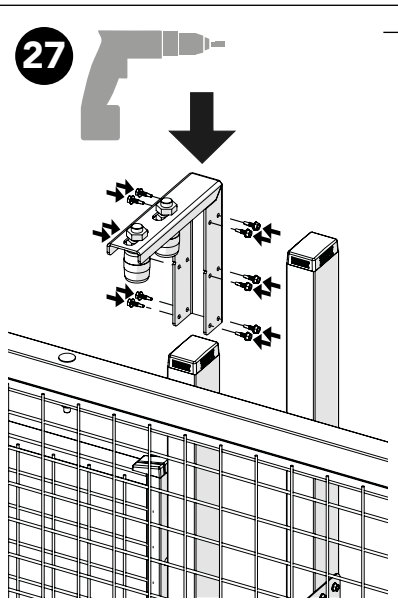


Kit 6430 Linear Sliding Door

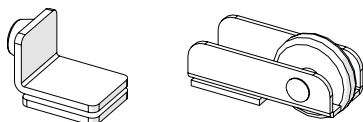


28



13

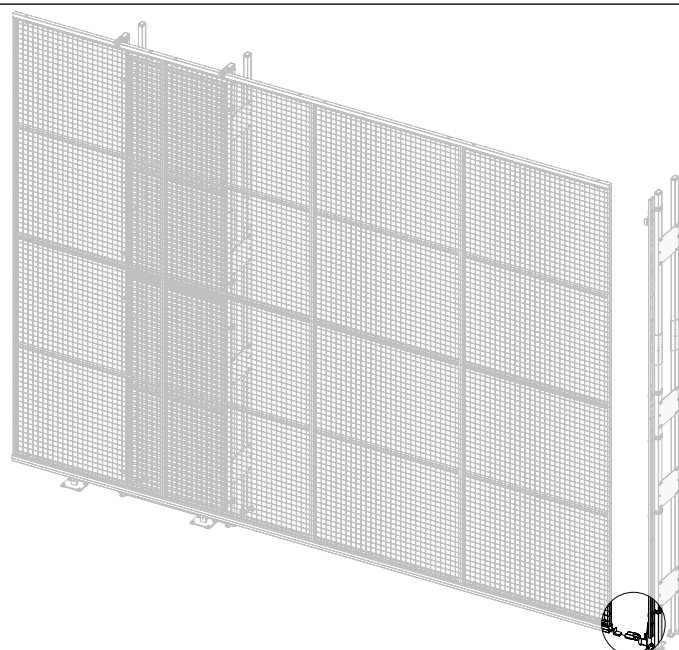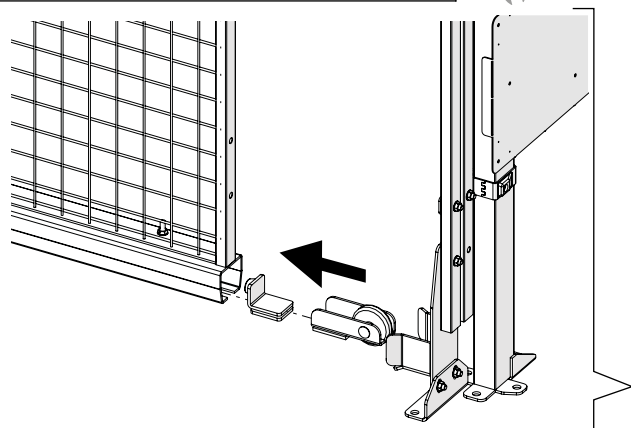



**Reinforcement Kit
6460 High Linear
+ Bag for kit 6460**

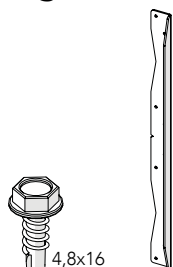




29

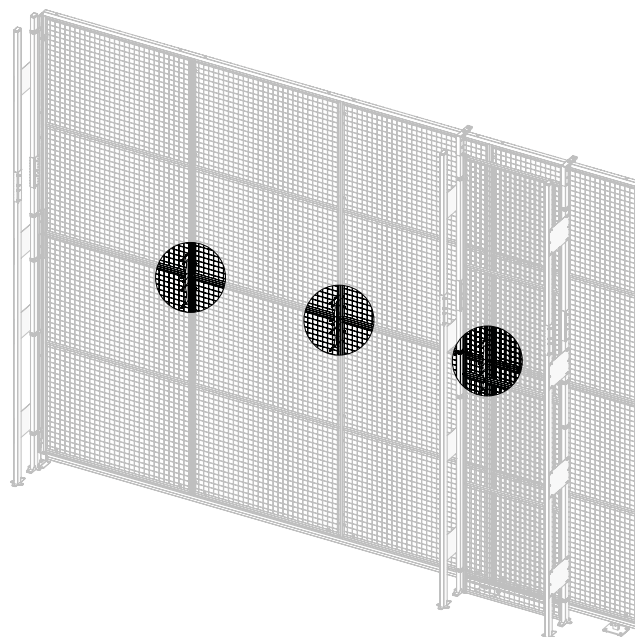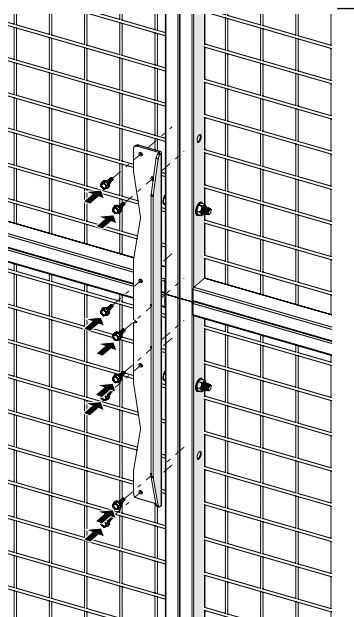

30

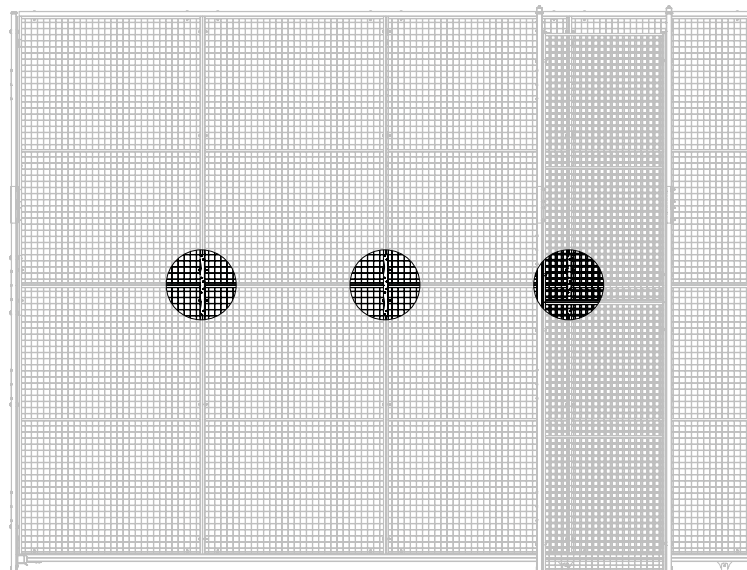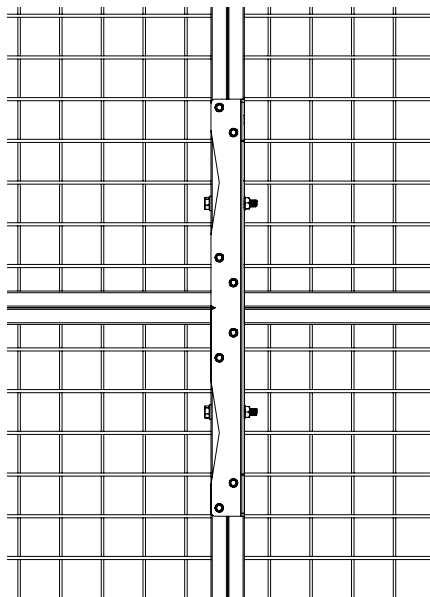

Kit 6430 Linear Sliding Door

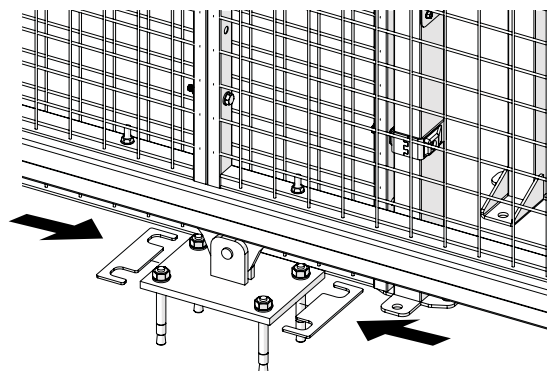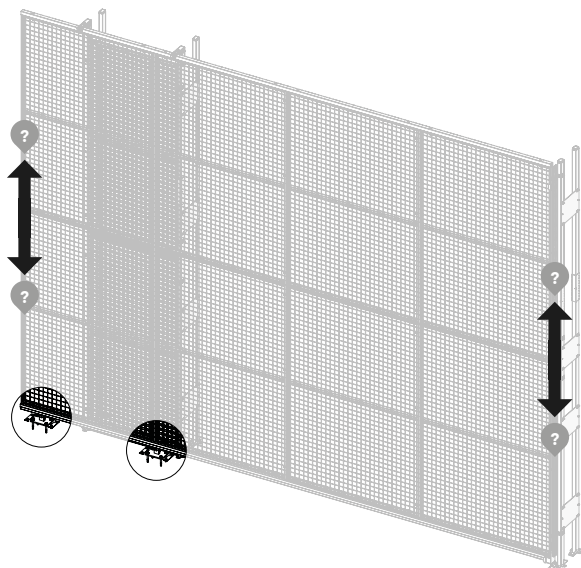


31

17



Kit 6430 Linear Sliding Door



32

